

seac
sea is calling

TABLET



U S E R M A N U A L



MADE IN CHINA




Table of Contents

TABLET MANUAL	4	System Settings (SYS SET)	25
GENERAL WARNINGS	4	PC Mode	26
SWITCHING ON THE TABLET	7	INFO mode	27
HARDWARE	7	RESET	27
APPLICATION SOFTWARE	8	OFF (FACTORY MODE)	29
TECHNICAL CHARACTERISTICS	9	USER SETTINGS RANGE	30
Dive modes	9	TABLET DURING THE DIVE	31
Decompression Algorithm	10	SCUBA (OC) DIVE	32
Levels of Protection	10	1. NDL Dive	33
Repetitive Dives	10	2. Deep Stop	34
Dives with Surfacing	10	3. Safety Stop	35
NDL - NonDecompressionLimit	10	4. DECO Dive	37
Safety Stop	10	5. Mix change during the dive	38
Deep Stop	11	DIVE IN GAUGE MODE	39
TTS	12	DIVE IN FREE MODE	40
Ascent Speed Alarm	12	AFTER THE DIVE	41
MOD Exceeded Alarm	12	Desaturation Time	41
Deco Violation Alarm	12	No-fly time	41
Locking the Computer	13	Logbook	43
No-fly time	14	Connect your Tablet computer to your PC or Mac	44
Desaturation Time	14	REPLACING THE BATTERY	45
Permitted Altitude Indicator	14	TABLET SERIAL NUMBER	46
Battery/Run-time	14	EC CERTIFICATION	46
Time and Time Zones	15	CARE AND MAINTENANCE	46
Planner	16	MARKING	47
DiveLogger	16	CERTIFICATE OF GUARANTEE	47
KEYS NOMENCLATURE	17	CE STATEMENT	50
MENU AND SETTINGS	17	FCC Caution:	50
User Data Memory:	17	FCC Radiation Exposure Statement:	51
Stopwatch	18		
Logbook	18		
MIXES	19		
Dive parameters (DIVESET)	20		
Connecting to tanks (TANK)	21		
Dive planner (PLANNER)	22		
Alarms (ALARMS)	23		
Display	23		

TABLET MANUAL

Congratulations on your purchase of a SEAC diving computer.

The SEAC Tablet dive computer is a technologically advanced device designed and manufactured to provide all the information that every diver needs.

Periodically check **www.seacsub.com** for any updates to this manual.

GENERAL WARNINGS

- **WARNING!**

Read the user manual fully before using the SEAC computer.

Using the computer incorrectly will void the warranty and can permanently damage the computer.

- **WARNING!**

Only use the dive computer after you have read all sections of the instruction manual and you have understood how it works.

- **WARNING!**

The dive computer is not a substitute for diver training and should only be used by divers who have been properly trained and who have earned the appropriate license issued by a Certified Teaching Association.

- **WARNING!**

The computer does not replace an understanding of decompression tables, which divers must always carry with them for safety, along with a depth gauge, a pressure gauge and a dive watch.

- **WARNING!**

In order to ensure that the pressure gauge function operates correctly, the TABLET wristwatch computer must only be coupled with the SEACSUB LED TANK PROBE.

- **WARNING!**

The SEAC computer is an auxiliary device during a dive. Therefore, it is crucial that each diver always carry with them a suitable table that will enable them to conduct the decompression phase if the unit should malfunction.

- **WARNING!**

Freediving entails the risk of syncope, taravana, pulmonary edema, and hemoptysis, while diving with scuba equipment entails the risk of decompression sickness, oxygen toxicity, and other risks generally

related to diving: even careful reading of this manual and correct use of the instrument does not exclude potential dangers.

- **WARNING!**

The computer cannot take into account individual physiological changes that can change from one day to the next. For this reason it's good practice to use the device conservatively and cautiously, remaining within the limits shown by the computer in order to minimize the risks.

- **WARNING!**

It is strictly forbidden to freedive in the 12 hours after diving with scuba equipment!

Violating this rule could considerably increase the risk of decompression sickness.

- **WARNING!**

Do not share one computer between two divers during the dive. Every diver must have their own instrument to provide information and save only that diver's data.

- **WARNING!**

Before diving, you must check the battery charge. Do NOT dive if the low battery icon is visible on the display. Always check that the display shows no signs of any malfunction and that it is clearly legible.

The Battery icon on the display has 2 segments:

Segment 1: Battery Outline ==> Battery lower than Minimum Voltage (do not dive).

Segment 2: First Bar from the bottom ==> Battery lower than 2.1V (Low level. The voltage could plummet during a dive in especially cold water).

- **WARNING!**

Always check that the settings are correct for your dive, and don't allow anyone else to tamper with your computer before the dive. If it has been tampered with by another person, check that your settings are correct.

- **WARNING!**

It is important to keep in mind that your body undergoes changes, even daily changes, that a computer cannot account for. If your physical condition is not excellent, or if you feel any physical problems, do not dive!

- **WARNING!**

The normal functions of the product could be disturbed by strong electromagnetic interference.

In this case, simply reboot the product to restore normal function, following the instructions provided in this manual (see "Reset") and use the product in another position.

- **WARNING!**

Strictly avoid pressing on the side grill of the sensor with your fingers, especially if the sensor compartment is full of water, because this could distort the measurement of zero, and could therefore result in an incorrect measurement of depth during the next dive, with the consequence that the NDL/Deco data may also be inaccurate.

In DIVE mode, if you notice a measurement of anything other than zero on the surface, you need to reset the device to zero out the sensor measurement (see the instructions and warnings on using the RESET further on in this manual) or wait a few hours for the system to reestablish the correct zeroing.

SWITCHING ON THE TABLET

If your Tablet was switched off in OFF mode (Factory mode), press both buttons at the same time to restart it.

Your Tablet has a system that automatically turns off the display after it is idle for 3 minutes. To restart it, press either of the two buttons.

HARDWARE

Type:	Wrist computer.
Screen:	LCD Icons/Segments/Transflective matrix with user-adjustable contrast.
Backlighting:	LED, user-adjustable.
Battery:	CR2450, non-rechargeable, 3V 600mAh, user-replaceable (we strongly recommend that you have this done at an authorized SEAC center, also replacing the O-ring in the battery compartment).
Buttons:	2
Alarm Type:	Audible and visual.
PC/Mac connection:	Bluetooth, serial via USB with special dedicated cable (optional).
Maximum operating depth	100 Meters/328 ft

APPLICATION SOFTWARE

Updates:	Supported through serial port via USB.
Factory mode:	Supported to save energy, can be set by the user.
Auto Recovery:	Automatic reboot if software locks.
Restore:	Manual, though combination of buttons/time.
Decompression Algorithm:	Buhlmann ZHL-16C for Air/Nitrox.
Levels of conservatism:	Yes, based on Gradient Factor.
Mixes Managed:	Air/Nitrox, #3 (O ₂ maximum 99%).
Dive modes:	Scuba, Gauge and Free (Apnea), and OFF (static)
Safety Stop:	Yes, user-customizable (depth and duration).
Deep Stop:	Yes, based on maximum depth reached.
Water Type:	Salt/Fresh.
Alarms:	MOD Violation, Ascent Speed, Deco Stop Violation.
LogBook Sampling:	Scuba/Gauge => 5 seconds; Free (Apnea) => 2 seconds.
LogBook Capacity:	Capacity approx. 40 hours (Scuba/Gauge mode) or approx. 18 hours (Free mode).
Planner:	NDL Air/Nitrox Calculation.
Stopwatch:	START / STOP / RESET / LAP.
Set Backlighting:	Auto
Units:	Metric / Imperial.
Watch:	24/12 hour format, dual time.
Reset:	Tissues/Settings.

TECHNICAL CHARACTERISTICS

Dive modes

The computer manages three dive modes:

I. Scuba mode:

Dive: when depth exceeds 150 cm/5 ft.

Emerge: when depth is less than 90 cm/3 ft.

II. Gauge mode:

Dive: when depth exceeds 150 cm/5 ft.

Emerge: when depth is less than 90 cm/3 ft.

III. Free Mode:

Dive: when depth exceeds 100 cm/3.3 ft.

Emerge: when depth is less than 50 cm/1.6 ft.

IV. OFF mode:

The computer does not enter any mode. Ideal for those who want to take static apnea dives.

After a dive in SCUBA or GAUGE mode, the computer stays on the SCUBA/ GAUGE screen for 10 minutes after emerging, and therefore you cannot access the menu and submenu.

After a dive in FREE mode, the computer stays on the FREE screen for 15 minutes after emerging, and therefore you cannot access the menu and submenu.

After a dive in SCUBA or GAUGE mode, FREE mode is inhibited and is not accessible for the next 12 hours.

After a dive in GAUGE mode, because tissue saturation is calculated assuming that the dive uses mix number 1, SCUBA mode is available.

After a dive in GAUGE mode, the Desaturation and NoFly times are updated with the new tissue saturation data. In particular, the NoFly time is set to 24 hours, as a precaution in favor of safety, regardless of the type of profile that was run.

After a dive in FREE mode, the residual Desaturation and NoFly time, if any existed before the dive in FREE mode, will be left unchanged.

If you Reset the Settings, the Computer will automatically start in SCUBA mode.

NOTE:

When the computer is in Watch mode and you dive without manually entering dive mode (using the R button), the Computer will automatically launch the mode you selected most recently.

Decompression Algorithm

The computer uses the original Buhlmann ZHL-16C Decompression Algorithm, unmodified.

Levels of Protection

The Tablet allows you to select 6 levels of protection (conservatism), from 0 to 5. Level 5 provides the maximum protection.

Repetitive Dives

All dives taken within a 48-hour period are considered "Repetitive Dives".

Dives with Surfacing

"Surfacing" is defined as the situation in which the diver emerges after having begun a Scuba type of dive.

Surfacing ends if the diver dives again within a period of fewer than ten minutes from emerging; beyond this limit the current dive is considered ended.

If you change mixes during the dive and dive again within the 10 minute Surfacing time, the mix in use is reset to the starting mix.

NDL - NonDecompressionLimit

The "NonDecompressionLimit" is defined as the time that remains at the current depth and breathing the mix that is currently set to avoid requiring decompression.

To avoid requiring decompression stops, the time required for the ascent must be subtracted from the NDL.

Safety Stop

The user can set both the depth and the duration of the Safety Stop.

NOTES:

- The Safety Stop is calculated and proposed if the maximum depth reached is greater than 12 meters/40 ft.
- The Safety Stop is shown when the diver comes within 9 meters/30 ft of the surface.

- c) The countdown begins if the diver arrives within +2 meters/6.5 ft and -2 meters/-6.5 ft of the stop depth set. If the stop set is to 5 meters/16.5 ft, the countdown starts between 7 meters/32 ft and 3 meters/10 ft. In this case then, if you go to a depth of less than 3 meters/10 ft, the stop is canceled.
- d) The Safety Stop is not calculated and is not proposed if at least one deco stop is underway within 9 meters/30 ft from the surface.
- e) If the current dive includes one or more decompression stops, and if these decompression stops are cleared during the ascent (before reaching 9 meters/30 ft) because of a very slow ascent or in any case a multilevel dive, then the Safety Stop is calculated and proposed at the time and duration set by the user.
- f) If the Diver again exceeds a depth of 9 meters/30 ft after having performed the stop, the Safety Stop is recalculated and proposed again in accordance with the rules described above.
- g) If the Diver descends to a depth greater than 9 meters/30 ft during the countdown, it will be reset and recalculated according to the rules above.

Deep Stop

If the Deep Stop is enabled, it is calculated as a 2-minute-and-30-second stop at half the maximum depth reached if the following conditions are met:

- Maximum depth reached greater than 18 meters/59 ft.
- There are no mandatory decompression stops during the ascent.

NOTES:

- a) The Deep Stop is displayed at +5 meters/+16.5 ft and -3 meters/-10 ft from the calculated stop. In other words, if the Deep Stop is at 20 meters/66 ft, it is displayed in the range from 17 meters/56 ft to 25 meters/82 ft.
- b) The countdown to the stop begins when the diver arrives in a range of +2 meters/6.5 ft and -2 meters/-6.5 ft from the calculated stop depth. For example: if the stop is calculated at 25 meters/83 ft., the countdown is performed in the range of 27 meters/89 ft. to 23 meters/75.5 ft. If the Diver moves -2 meters/-6.5 ft from the stop depth (meaning lower than 23 meters/75.5 ft), it is canceled. If the Diver is between 27 meters/89 ft and 31 meters/102 ft, the countdown is suspended.
- c) If the Diver again exceeds the stop depth by more than 6 meters/20 ft (or in any case, 18 mt/59 ft), the stop will be recalculated according to the rules above.

TTS

The "TTS" is the total time to surface, and accounts for the entire time for executing mandatory decompression stops (calculated according to user settings) and the ascent time (calculated at a constant velocity of 9 m/min - 30 ft/min).

Ascent Speed Alarm

The standard maximum ascent speed is set at 9 meters/minute (30 ft/minute).

The Ascent Speed Alarm indicates the ascent speed using icons, and is only available in SCUBA mode.

The Ascent Rate icon consists of 3 arrows.

The Ascent Speed Alarm is both visual and audible.

The visual alarm cannot be disabled.

Users can disable the audible alarm.

The rules for the Ascent Speed Alarm are:

- Speed \leq 3m/min - 10ft/min: No indication
- 3m/min - 10ft/min < Speed \leq 6m/min - 20ft/min: One arrow
- 6m/min - 20ft/min < Speed \leq 9m/min - 30ft/min: Two arrows
- 9m/min - 30ft/min < Speed \leq 12m/min - 40ft/min: Three arrows
- Speed > 12m/min - 40 ft/min: Three flashing arrows + Audible alarm

MOD Exceeded Alarm

The "MOD" defines the maximum operating depth for the mix in use and is calculated as a function of the real surface atmospheric pressure and the PpO_2 (oxygen partial pressure) set for the mix in use.

The alarm for Exceeding the MOD is visual and audible.

The visual alarm cannot be disabled; this is indicated by the field for the current depth flashing.

Users can disable the audible alarm.

Both alarms are activated as soon as the MOD is exceeded.

Deco Violation Alarm

The Deco Violation Alarm will trigger when the Diver reaches a depth less than (in absolute value) that set by the mandatory decompression stop.

The Deco Violation Alarm is visual and audible.

The visual alarm cannot be disabled; this is indicated by the field for the current depth flashing.

Users can disable the audible alarm.

Both alarms will trigger when the Diver reaches a depth less than (in absolute value) 0.5 meters/1.6 ft of the mandatory decompression stop indicated.

The alarm does not trigger for Deep Stops and Safety Stops, because these stops are not mandatory.

Locking the Computer

If decompression stops are omitted, rather than immediately switching to lock mode like other dive computers, Tablet applies penalty points that eventually result in locking the SCUBA mode upon reaching 150 points.

The penalty points are assigned as follows:

- 5 points for every 5 seconds, if the diver's current depth is lower than one meter/three feet from the stop level indicated.
- 10 points for every 5 seconds, if the diver's current depth is lower than two meters/6.5 feet from the stop level indicated.

This means that for an ongoing violation, Tablet will enter lock mode after about 2 minutes at a depth lower than one meter, and after about 1 minute if the stop depth violation is 2 meters/6.5 feet, naturally only if the violation is occurring in the direction of the surface.

Once it reaches 150 points, the computer switches to lock mode.

The diver will be notified during the dive with an **"Alert"** icon and a message, alternating with information about remaining decompression, indicated by the words **"WARNING DECO VLT"**.

Decompression will still be calculated until the end of the dive where anticipated by the Buhlmann mathematical model.

• WARNING!

two repetitive dives with surface times of fewer than 10 minutes are considered to be a single dive.

If the mandatory decompression stop is violated during the dive and the computer switches to lock mode, SCUBA mode will not be available for 18 hours. After this period, the counter to put the watch out of service will be reset at the beginning of the next dive.

If you begin a new dive in SCUBA mode before this interval, when the computer is still in lock mode, the **"Alert"** icon and the message reading **"WARNING DECO VLT"** will be displayed for the entirety of the dive, without alternating with the decompression data.

Whenever the computer is locked, the NoFly and Desaturation times are not shown.

No-fly time

NoFly time is calculated according to the following rules:

- 12 hours for a single dive (no dive in the preceding 48 hours) within the no-decompression limits.
- 18 hours for repetitive dives without decompression on the same day or multiday.
- 24 hours for repetitive dives with decompression on the same day or multiday.

For more information, consult the "No-fly Time" section in the "After the Dive" chapter.

Desaturation Time

The tissue Desaturation Time is calculated immediately at the end of the dive.

It is defined as the time necessary for the nitrogen inert gas pressure to be lower than the Partial pressure of nitrogen (P_{pN_2}) breathed, increased by a tolerance factor.

For more information, consult the "Desaturation Time" section in the "After the Dive" chapter.

Permitted Altitude Indicator

The Permitted Altitude is calculated and updated after dives in any mode.

The Permitted Altitude icon is shown in Watch mode, and is managed as follows:

- Max 1000 m/3280 ft: 1 triangle on.
- Max 2000 m/6580 ft: 2 triangles on.
- Max 3000 m/9870 ft: 3 triangles on.
- No Limit: icon off (not displayed).

Battery/Run-time

The computer is powered by a 3V CR2450 battery with a nominal capacity of 600 mAh.

The battery capacity varies based on environmental conditions.

The battery run-time varies depending on how the product is used and which functions are used.

The run-time drops noticeably when backlighting, audible alarms, PC connections, and updates are used.

When the Software Application is launched, a test of the battery under load is performed. When this happens you may notice the backlighting turn on temporarily. If the battery voltage under load is less than 2.0V (Minimum Voltage), the device will remain off or locked, on a screen with the words "**LOW BAT**". In some cases you may see a continuing Reset for a few cycles.

If the battery voltage under load is below 1.8V (Start Voltage), the backlighting may remain on continuously until the computer battery is completely drained. In this case, the computer will not turn on at all and no text appears on the LCD.

The Battery icon on the display has 2 segments:

Segment 1: Battery Outline ==> Battery lower than Minimum Voltage (do not dive).

Segment 2: First Bar from the bottom ==> Battery lower than 2.1V (Low level. The voltage could plummet during a dive in especially cold water).

Theoretical run-time, linked strictly to the quality of the battery installed:

Mode	Theoretical average run-time (years)
Factory Mode	8.4
Watch	3.0
100 dives/year	2.9
200 dives/year	2.7
300 dives/year	2.1

The data indicated above:

refer to a new battery of recent manufacture (and therefore not subject to excessive auto-draining);

refer to use at 25°C/77°F;

refer to use that does not entail direct exposure to sunlight;

do not include consumption by backlighting and audible alarms.

Time and Time Zones

The computer can handle two time zones:

Local Time: Time at the user's location.

Home Time: The time at home.

The reference time is always the LOCAL time, and is indicated in the center of the Watch screen, or in secondary screens during SCUBA/GAUGE/FREE/OFF dives.

The Home time can only be changed by editing the value of the "UTC HOME" time zone in the "SYS SET" menu.

If "UTC LOC" and "UTC HOME" are the same, only one time is shown on the Watch screen.

If the two parameters do not match, the LOCAL Time is shown in the center of the screen (the date indicated refers to this Time), while the HOME time is shown on the lower right.

If the date for each of the two Times is different, the date offset from the HOME Time will be shown on the lower right: "+1 / -1".

Planner

Tablet's Planner lets you simulate and plan a dive, displaying the NDL time (within non-decompression limits) depending on the depth set.

The Planner allows you to plan Air/Nitrox with NDL only, meaning within the non-decompression limits, and therefore requiring no decompression time.

The input data (mix, Max PpO₂, and level of conservatism) are entered in the various submenus ("MIX", "DIVE SET") and are used to calculate the NDL.

The calculated NDL accounts for descent performed at 18 meters/minute.

The calculated NDL does not include the time required for the ascent.

In Planning mode, you can only change the dive depth and the surface time.


The NDL Time display is updated immediately whenever the dive depth or surface interval is changed.

Depths greater than 45 meters/150 ft cannot be entered.

DiveLogger

Dive data can be downloaded to be saved, viewed, and processed. The software for both Windows 10 and Mac is available for free download on the website www.seacsub.com. The TABLET can be connected to a PC using Bluetooth. Otherwise, a special USB cable will be needed, which can be purchased separately.


KEYS NOMENCLATURE

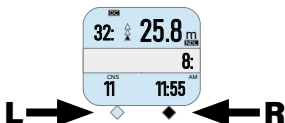

MENU AND SETTINGS

Methods for entering all the settings menus listed below:

- From the “watch” display, long press the R (right) button and hold for two seconds. DIVE LOG will appear on the display. From here, press the R button multiple times until the name of the desired function appears on the display. At this point, to enter the corresponding setting/editing submenu, confirm your choice with the L button (left).
- From any position you're in, press the L and R buttons at the same time to return to the main screen (watch).



User Data Memory:


The computer settings data that the users enters/edits, the tissue data, and the current date/time are saved every 15 minutes.

Therefore, if you change the battery, the data that is restored on reboot are at most 15 minutes old, so the time will only need to be adjusted manually by a few minutes.

Stopwatch

The stopwatch can only be activated from the WATCH, GAUGE DIVE, and FREE DIVE function, and not from the SCUBA DIVE function.

To switch to the stopwatch function, press the L button from one of the functions listed above.

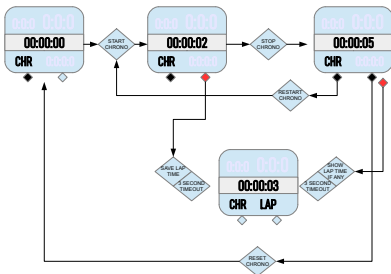

Logbook

The computer memory intended for saving SCUBA/GAUGE/FREE dives taken is limited to:

- approx. 40 hours (Scuba/Gauge mode). Sampling time every 5 seconds.
- approx. 18 hours (Free mode). Sampling time every 2 seconds.

If the memory becomes completely full, the oldest dives will be deleted to make room for new dives.

MIXES


Tablet can manage up to three gas mixes with oxygen percentages (O_2) from 21% to 99% and oxygen partial pressure (PpO_2) from 1.2 to 1.6 bar.

When you enter the "MIX1" submenu, the number of the oxygen percentage for this gas mix will flash. This can be set by using the L (+) and R (-) buttons. Fields for setting O_2 from 21% to 99%. The upper right of the screen shows the MOD, meaning the maximum operating depth for the O_2 percentage selected and for the PpO_2 selected, which can be set by pressing the R button (right) for 2+ seconds: the PpO_2 number will flash, and you can select the desired value using the L (+) and R (-) buttons. Setting range from 1.2 to 1.6 bar in increments of 0.05 bar. Once the PO_2 has also been selected, pressing the R button for 2+ seconds will switch to the "MIX2" screen. Using the same methods used for MIX1, set the O_2 and PO_2 percentage. Then you can press the R button for 2+ seconds to activate MIX2 by selecting ON or OFF with the L or R buttons. Press both buttons at the same time to exit the MIX menu. Once the PO_2 has also been selected, pressing the R button for 2+ seconds will switch to the "MIX3" screen. Using the same methods used for MIX1, set the O_2 and PO_2 percentage. Then you can press the R button for 2+ seconds to activate MIX3 by selecting ON or OFF with the L or R buttons. Press both buttons at the same time to exit the MIX menu.

• WARNING!

Changing these settings requires special training on the use of enriched breathing mixes. If you have not received this training, do not dive with enriched breathing mixes!

Do not dive using breathing mixes other than those set in your diving computer. Using mixes other than those set makes it impossible to calculate the decompression correctly!

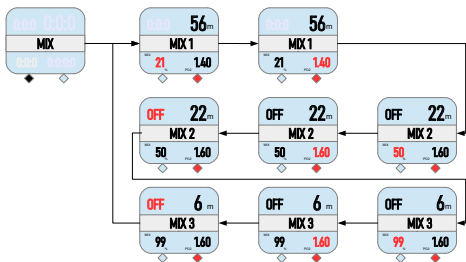

Dive parameters (DIVESET)

When you have entered the "MODE" submenu, use the L (+) or R (-) buttons to select the type of dive: OFF (for static apnea), using an open-circuit respirator (OC) "SCBA", or in Instrument/Gauge mode (depth gauge/timer only) "GAGE", or again for "FREE" dives. Confirm the dive type selection by pressing the R button for 2+ seconds. The appropriate icon (OC, GAUGE, or FREE) will turn on at the top of the screen during the dive to display your choice.

The "SFT LEV" screen will appear with a flashing number. On this screen you can select the desired level of safety, from 0 to 5. In other words, you can choose whether you prefer your Tablet to be more or less conservative when calculating the safety or decompression curve. Selecting 5 means that you want to be as conservative as possible, while 0 is the minimum value.


Once you have selected the value you want, press the R button for longer than 2 seconds to switch to the **S.S.TIME** screen, where you can set the Safety Stop time in minutes, meaning the safety stop to take before emerging. Values can be set with the L and R buttons from 0 (no Safety Stop) to 5 minutes.

Pressing the R button for 2+ seconds will switch you to the page for selecting the Safety Stop depth: **S.S.DPT**. This can be set from 3 to 6 meters (10 to 20 ft) in depth using the L and R buttons.

Press the R button for 2+ seconds. The **DEEP STP** screen will appear, where you can select ON-OFF to decide whether or not to activate the Deep Stop. If

you select ON, Tablet will calculate the depth and time automatically. Press the R button for 2+ seconds to confirm your choice.

The **WATER** screen will appear, in which you can select the water type, either sea (SLT) or fresh (FRH). Press the L and R buttons simultaneously to confirm your choice and return to the main screen.

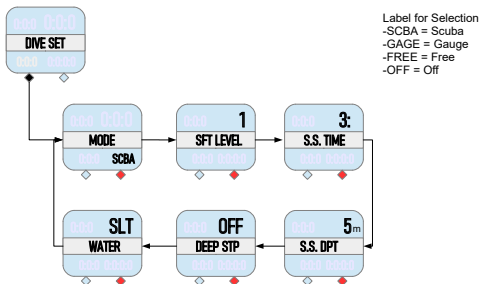

• WARNING!

For safety reasons, it is **NOT** possible to set **FREE** mode as the main mode unless 12 hours have elapsed since the most recent **SCUBA** or **GAUGE** dive.

Connecting to tanks (TANK)


Connect the LED TANK PROBE (optional) to an HP port on the regulator first stage. Check that the tank has at least 15 bar of residual pressure (the LED TANK PROBE will not activate below this value). Deliver pressure and wait to visually verify the LEDs and battery status.

Warning! It's important to open the tank valves very slowly and release pressure from the second stage until it stabilizes, ensuring that there are no leaks.

Enter the TABLET's TANK menu and switch to "ON", making sure that there are no other probes within 2 meters.

Enter the next submenu and press "PRG". Check that the probe ID appears on the display along with the pressure reading in BAR for the connected tank.

Select "YES" to finish pairing the computer and probe. The screen will identify the current mix (MIX1, MIX2 or MIX3) and show the ID number of the probe (from 1 to 2047) and the pressure reading in BAR. If more than one mix (MIX1) has been set, repeat the procedure for each probe.

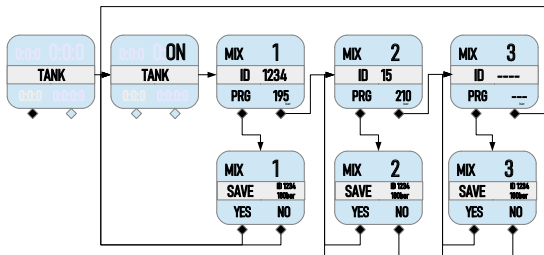


Dive planner (PLANNER)

When you enter this SET, first the depth setting field flashes. This can be changed using the L & R buttons. Press the R button for 2+ seconds and you can set the surface time.

You cannot enter depths greater than those permitted by the MOD for the mix set (shown at the bottom of the screen).

The input data (mix, Max PpO_2 , and level of conservatism) are entered in the various submenus ("MIX", "DIVE SET") and are used to calculate the NDL.



Alarms (ALARMS)

• WARNING!

Tablet allows you to suppress audible alarms. However, we recommend that you only make this choice after careful consideration and with full awareness. Audible alarms are an important warning for possible violations and behavior errors during the dive that could result in accidents, even serious ones.

All the audible alarms can be enabled (ON) or disabled (OFF) using the L or R buttons, and confirmed by long-pressing the R button.


• WARNING!

Except for special situations, we do not recommend disabling audible alarms.

DECO VLT: decompression stop violation alarm signaled by the Tablet.

MOD VLT: alarm indicating violation of maximum operating depth permitted for the gas mix in use.

ASC SPD: excessive ascent speed alarm.

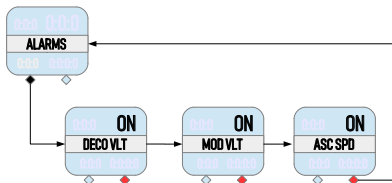

Display

BACKLIGHT BRIGHTNESS LEVEL (BKL LEV): Levels available from 0 to 3 (if you select "0" backlighting will not activate)

BKL TIME: duration of the backlight in seconds in AUTO mode; selectable from 2" to 10".

BKL MODE: 3 modes:

AUTO by choosing this option, the backlight will remain on for the preset time.

MAN: the backlighting will be turned on and off manually by long-pressing the L button for 2+ seconds. In watch mode, the backlighting will turn off automatically after 600 seconds.


DIVE: by activating this option, the backlighting will activate automatically when the dive begins and will remain on for the full duration of the dive.

• **WARNING!**

intense use of the backlight will consume the battery faster, so it will not last as long.

CONTRAST: 5 display contrast levels can be selected

You can make the selection for each mode using the L (+) and R (-) buttons, and confirm by long-pressing the R button, moving to the next selection. Press L + R at the same time to return to the main view.

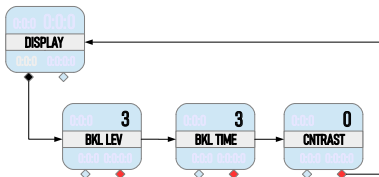

System Settings (SYS SET)

The settings below are possible in this mode: hour/minute (TIME), date (DATE), UTC second time zone, UTC primary time (UTC HOME), 12/24 hour format (FORMAT), unit of measure meters MTR or feet IMP (UNITS).

The reference time is always the LOCAL time, and is indicated in the center of the watch screen, or in secondary screens SCUBA/GAUGE/FREE during the dive.


The Home time can only be changed by editing the value of the "UTC HOME" time zone in the "SYS SET" menu.

If "UTC LOC" and "UTC HOME" are the same, only one time is shown on the watch screen.

If the two parameters do not match, the LOCAL time is shown in the center of the screen (the date indicated refers to this time), while the HOME time is shown in the lower right.

If the date for each of the two times is different, the date offset from the HOME time be shown on the lower right: "+1 / -1"

You can make the selection for each mode using the L (+) and R (-) buttons, and confirm by long-pressing the R button, moving to the next selection. Press L + R at the same time to return to the main view.

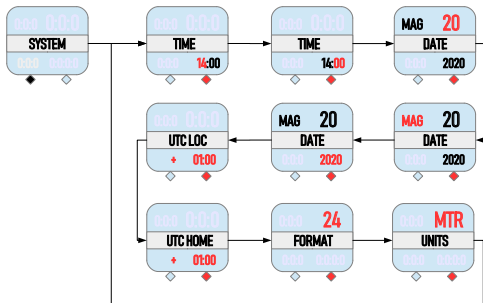

PC Mode

To connect your Tablet to a PC or Mac to link with the SeacSync software and download your data, your Tablet must be set to this mode before you connect it to the computer using Bluetooth or with the special USB cable (optional).



USB ready
BLE advertising




USB ready
BLE pairing, 6 digit passkey



USB ready
BLE connected

INFO mode

The Info screen shows: the name of the model, the serial number (which is also laser engraved on the back of the case), and the firmware version installed.

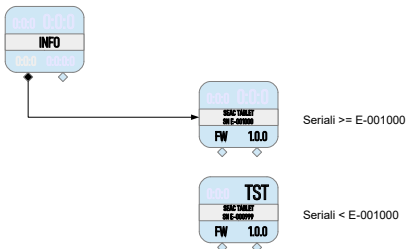

RESET

Resetting tissues and user settings is a risky procedure, especially if the diver is taking repetitive dives. Therefore you have to confirm twice before a reset will be performed:

Enter a four-digit security code. The security code is "5555".

Set each of the 4 digits individually, using the L (+) and R (-) buttons, and confirm by long-pressing the R button.

If the code entered is valid, before performing a reset, you will need to confirm the operation by pressing the corresponding button below.

If the operation is successful, the message "RESET DONE" will appear.

• WARNING!


On the watch screen, the icon of the "WARNING" symbol will appear on the lower left to alert the diver and remind them that the computer was reset. This symbol will disappear after the next SCUBA/GAUGE/FREE dive.

• WARNING! DANGER!

Do NOT perform the tissue saturation reset if the device will be used soon by the same person!

This can lead to the risk of accidents, including fatal ones.

The tissues can only be reset if the Tablet will be used by a person who has not taken any dives in the previous 48 hours.

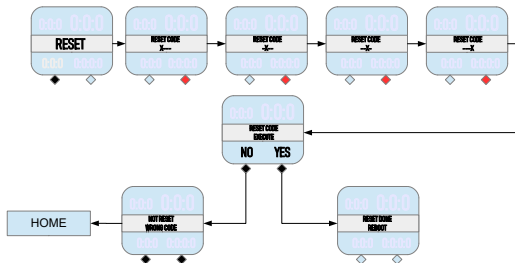


OFF (FACTORY MODE)

"Factory Mode" is a special function for reducing energy consumption to a minimum and helping the battery last as long as possible.

The computer will be "off", while still keeping all settings, storage, and time calculation in memory.

From the OFF screen, pressing the L button will display the word "EXECUTE". From here you can confirm your choice of switching your Tablet to OFF using the R (YES) button, or reject it with the L (NO) button.

To exit "Factory mode" and reactivate the Tablet, you will need to press the L and R buttons at the same time.

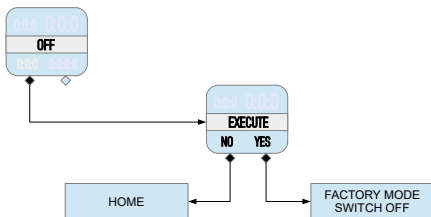

USER SETTINGS RANGE

MENU	PARAMETER	RANGE	DEFAULT	UNIT	NOTES
MIX	MIX 1 O ₂ %	21-99	21	%	
	MIX 1 PPO ₂	1.20-1.60	1.40	bar	
	MIX 2 O ₂ %	21-99	50	%	
	MIX 2 PPO ₂	1.20-1.60	1.60	bar	
	MIX 2 ON/OFF	ON/OFF	OFF		
	MIX 3 O ₂ %	21-99	50	%	
	MIX 3 PPO ₂	1.20-1.60	1.60	bar	
	MIX 3 ON/OFF	ON/OFF	OFF		
MENU	PARAMETER	RANGE	DEFAULT	UNIT	NOTES
DIVE SET	MODE	SCUBA/ GAUGE/ FREE/OFF	SCUBA		
	SFT LEVEL	0-5	0		Level of conservatism of the ALGORITHM
	S.S. TIME	0-5	3	Min	
	S.S DPT	3-6	5	m/ft	
	DEEP STP	ON/OFF	OFF		
	WATER	SALT/FRESH	SALT		
MENU	PARAMETER	RANGE	DEFAULT	UNIT	NOTES
ALARMS	DECO VLT	ON/OFF	ON		Decompression stop violation
	MOD VLT	ON/OFF	ON		Violation of maximum operating depth for breathed mix
	ASC SPD	ON/OFF	ON		Ascent rate violation

MENU	PARAMETER	RANGE	DEFAULT	UNIT	NOTES
DISPLAY	BKL LEV	0-3	3		
	BKL TIME	2-10	3	Seconds	
	BKL MODE	AUTO/MAN/ DIVE	AUTO		
	CONTRAST	0-5	0		
MENU	PARAMETER	RANGE	DEFAULT	UNIT	NOTES
SYS SET	TIME	-	-		
	DATE	-	-		
	UTC LOC	-12:00 / +14:00	+1:00		Rome Time Zone
	UTC HOME	-12:00 / +14:00	+1:00		Rome Time Zone
	FORMAT	24/12	24		
	UNITS	METRIC/IMP	METRIC		

TABLET DURING THE DIVE

- WARNING!**

This manual does NOT replace adequate training!

- WARNING!**

Before diving, always check that the dive mode has been set correctly for the dive you are about to take (SCUBA-OC, Gauge, or Free) by pressing the R button from watch mode and checking that the icon showing at the top is the correct one, or you can make a selection in the "DIVESET" set.

- **WARNING!**

This check is important, because if you begin a dive in the wrong mode (for example, FREE instead of OC-SCUBA), firstly you will not have the correct information which could compromise your safety if you continue the dive, and even if you resurface immediately you need to wait out the time planned for the end of the dive, meaning 10 minutes for a dive set to SCUBA/GAUGE and 15 minutes for a dive set to FREE.

If you do not switch to dive mode manually by pressing the R button once from watch mode, Tablet will automatically activate dive mode once you descend past 1.5 meters/5 ft, unless MODE is set to OFF.

SCUBA (OC) DIVE

- **WARNING!**

This manual does NOT replace adequate training.

- **WARNING!**

Do not dive with the Tablet if the battery charge is low, meaning with only Segment 1 lit: Battery Outline ==> Battery lower than Minimum Voltage. When only the first block from the bottom is lit, this means a low battery charge.


1. NDL Dive

Screen 1	Data displayed:
<p>Screen 1 display: Dive time – current depth (32:25.8m), NDL time (8:), MIX (21%), MAX (25.8m).</p>	<p>Dive time – current depth</p> <p>NDL time</p> <p>Oxygen percentage of the current mix – Maximum depth reached</p>
Screen 2	
<p>Screen 2 display: Dive time – current depth (32:25.8m), NDL time (8:), MIX (21%), Tank pressure (185 bar).</p>	<p>Dive time – current depth</p> <p>NDL time</p> <p>Oxygen percentage of the current mix – Tank pressure</p>
Screen 3	
<p>Screen 3 display: Dive time – current depth (32:25.8m), NDL time (8:), MIX (21%), PpO₂ (0.75).</p>	<p>Dive time – current depth</p> <p>NDL time</p> <p>Oxygen percentage of the current mix – PpO₂</p>
Screen 4	
<p>Screen 4 display: Dive time – current depth (32:25.8m), NDL time (8:), Current temperature (21.8°C), Average depth (20.7m).</p>	<p>Dive time – current depth</p> <p>NDL time</p> <p>Current temperature – Average depth</p>
Screen 5	
<p>Screen 5 display: Dive time – current depth (32:25.8m), NDL time (8:), CNS O₂ % value (11), Current time (11:55 AM).</p>	<p>Dive time – current depth</p> <p>NDL time</p> <p>CNS O₂ % value (O₂ toxicity level on the central nervous system (CNS)) - Current time</p>

2. Deep Stop




If the Deep Stop function is set, it will be displayed 5 m/16 ft before the actual depth required in the central line on the display, and will be removed (if not performed) 5 m/16 ft after the depth required.



DS 1 Screen	Data displayed:
	<p>Dive time – current depth</p> <p>Deep Stop depth – Deep Stop time</p> <p>Oxygen percentage of the current mix – Maximum depth reached</p>
DS 2 Screen	
	<p>Dive time – current depth</p> <p>Deep Stop depth – Deep Stop time</p> <p>Oxygen percentage of the current mix – Tank pressure</p>
DS 3 Screen	
	<p>Dive time – current depth</p> <p>Deep Stop depth – Deep Stop time</p> <p>Oxygen percentage of the current mix – PpO_2</p>
DS 4 Screen	
	<p>Dive time – current depth</p> <p>Deep Stop depth – Deep Stop time</p> <p>Current temperature – Average depth</p>

DS 5 Screen	
	<p>Dive time – current depth</p> <p>Deep Stop depth – Deep Stop time</p> <p>CNS O₂ % value (O₂ toxicity level on the central nervous system (CNS)) - Current time</p>





3. Safety Stop

If the Safety Stop has been set (recommended), it will be shown on the display in the center line of the computer during the ascent beginning at a depth of 9 m/30 ft. The safety stop is automatically omitted if the dive requires decompression.

SS 1 Screen	Data displayed:
	<p>Dive time – current depth</p> <p>Safety Stop depth – Safety Stop time</p> <p>Oxygen percentage of the current mix – Maximum depth reached</p>
SS 2 Screen	
	<p>Dive time – current depth</p> <p>Safety Stop depth – Safety Stop time</p> <p>Oxygen percentage of the current mix – Tank pressure</p>
SS 3 Screen	
	<p>Dive time – current depth</p> <p>Safety Stop depth – Safety Stop time</p> <p>Oxygen percentage of the current mix – PpO₂</p>

<p>SS 4 Screen</p>  <p>The SS 4 Screen displays the following information: Dive time (32), current depth (25.8 m), Safety Stop depth (5), Safety Stop time (3), Current temperature (21.8 °C), and Average depth (20.7 m). Navigation arrows are shown at the bottom.</p>	<p>Dive time – current depth</p> <p>Safety Stop depth – Safety Stop time</p> <p>Current temperature – Average depth</p>
<p>SS 5 Screen</p>  <p>The SS 5 Screen displays the following information: Dive time (32), current depth (25.8 m), Safety Stop depth (5), Safety Stop time (3), CNS O₂ % value (11), and current time (11:55 AM). Navigation arrows are shown at the bottom.</p>	<p>Dive time – current depth</p> <p>Safety Stop depth – Safety Stop time</p> <p>CNS O₂ % value (O₂ toxicity level on the central nervous system (CNS)) - Current time</p>

4. DECO Dive


Screen 1	Data displayed:
	<p>Dive time – current depth</p> <p>TTS (total time to surface) – first stop depth – DECO time of the first stop.</p> <p>Oxygen percentage of the current mix – Maximum depth reached</p>
Screen 2	
	<p>Dive time – current depth</p> <p>TTS (total time to surface) – first stop depth – DECO time of the first stop.</p> <p>Oxygen percentage of the current mix – PpO_2</p>
Screen 3	
	<p>Dive time – current depth</p> <p>TTS (total time to surface) – first stop depth – DECO time of the first stop.</p> <p>Current temperature – Average depth</p>
Screen 4	
	<p>Dive time – current depth</p> <p>TTS (total time to surface) – first stop depth – DECO time of the first stop.</p> <p>CNS O_2 % value (O_2 toxicity level on the central nervous system (CNS)) – Current time</p>

5. Mix change during the dive

If a second and third mix are also set in addition to the bottom mix, Tablet will alert the user at the best time to make the change by flashing the %O₂ on the lower left of the main dive screen.

To confirm the mix change, select YES by pressing the R button. To reject the change, select NO with the L button.

Once the change is made, the new Mix will be displayed in the lower left corner.

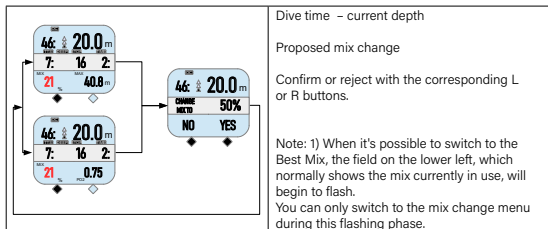

DIVE IN GAUGE MODE


• WARNING!

This manual does NOT replace adequate training.

• WARNING!

Adequate training is required to use Tablet in GAUGE mode.

In GAUGE mode, Tablet does not calculate NDL or decompression. It only shows the following information on three screens:

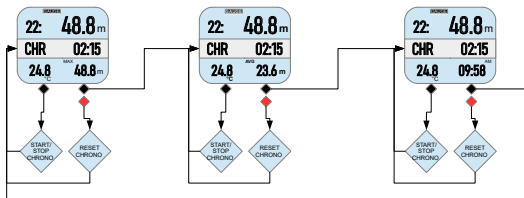

	<p>Dive time – current depth</p> <p>Stopwatch</p> <p>Temperature – maximum depth reached during the current dive</p>
	<p>Dive time – current depth</p> <p>Stopwatch</p> <p>Temperature – average depth</p>
	<p>Dive time – current depth</p> <p>Stopwatch</p> <p>Temperature – current time</p>

DIVE IN FREE MODE

• WARNING!


This manual does NOT replace adequate training.

• WARNING!

For safety reasons, Free mode cannot be selected unless at least 12 hours have passed since the most recent dive in OC or GAUGE mode.

In FREE mode, Tablet provides the information a freediver needs. Tablet does not provide the minimum suggested surface time between one dive and the next.

The information is displayed on two screens, and is the following:

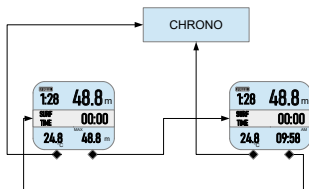

	<p>Dive time – current depth</p> <p>Surface time; the timer begins as soon as the dive starts</p> <p>Temperature – maximum depth reached during the current dive</p>
	<p>Dive time – current depth</p> <p>Surface time; the timer begins as soon as the dive starts</p> <p>Temperature – current time</p>

AFTER THE DIVE

After a dive in SCUBA or GAUGE mode, the computer stays on the SCUBA/ GAUGE screen for 10 minutes after emerging, and therefore you cannot access the menu and submenu.

After a dive in FREE mode, the computer stays on the FREE screen for 15 minutes after emerging, and therefore you cannot access the menu and submenu.

After a dive in SCUBA or GAUGE mode, FREE mode is inhibited and is not accessible for the next 12 hours.

After a dive in GAUGE mode, because tissue saturation is calculated assuming that the dive uses mix number 1, SCUBA mode is available.

After a dive in GAUGE mode, the Desaturation and NoFly times are updated with the new tissue saturation data. In particular, the NoFly time is set to 24 hours, as a precaution in favor of safety, regardless of the type of profile that was run.

After a dive in FREE mode, the residual Desaturation and NoFly time, if any existed before the dive in FREE mode, will be left unchanged.

Desaturation Time

The tissue Desaturation Time is calculated immediately at the end of the dive.

It is defined as the time necessary for the nitrogen inert gas pressure to be lower than the Partial pressure of nitrogen (PpN_2) breathed, increased by a tolerance factor.

All calculations refer to the atmospheric pressure measured at the end of the dive.

NOTE: When using the DAN Protocol to calculate the NoFly time, for some dive profiles it is likely that the NoFly time will be higher than the Desaturation Time, which might not appear consistent. This is due to the fact that the NoFly time might derive from a protocol and not from an exact mathematical calculation. Therefore, in order to avoid creating confusion for the end user, if the NoFly time calculated at the end of the dive is greater than the Desaturation Time, the algorithm corrects the Desaturation Time so that it is equal to the NoFly time. This calculation is to achieve a higher level of safety.

No-fly time

Under the DAN protocol, the NoFly time is calculated according to the following rules (Revised Flying After Diving Guidelines for Recreational Diving – May 2002):

- 12 hours for a single dive (no dive in the preceding 48 hours) within the no-decompression limits.
- 18 hours for repetitive dives without decompression on the same day or multiday.
- 24 hours for repetitive dives with decompression on the same day or multiday.

Since the scenarios that have been studied are limited and the Dive Computer allows you to assess exactly the load in each individual tissue, the following strategy will be adopted, in favor of safety:

- The NoFly time is calculated according to the Buhlmann algorithm.
- If the time calculated is lower than the time indicated by the DAN protocol, then the time obtained from the DAN protocol is used.
- If the time calculated is higher than the time indicated by the DAN protocol, then the time obtained from the Buhlmann algorithm is used.

The calculation method according to the Buhlmann algorithm will be done using 0.550bar as the cabin pressure. This is the minimum pressure recorded in commercial aircraft.

Special cases:

1. If you have not taken any dive, in any mode, in the previous 48 hours:
 - a. If you take a dive in GAUGE mode, the NoFly time will be 24 hours.
 - b. If you take a dive in FREE mode, the NoFly time will not be calculated.
2. If you took a SCUBA dive (of any kind):
 - a. If you take another dive in GAUGE mode before the NoFly time expires, after the dive in GAUGE mode the NoFly time will be 24 hours.

Logbook




The computer memory intended for saving SCUBA/GAUGE/FREE dives taken is limited to:

- approx. 40 hours (Scuba/Gauge mode). Sampling time every 5 seconds.
- approx. 18 hours (Free mode). Sampling time every 2 seconds.

If the memory becomes completely full, the oldest dives will be deleted to make room for new dives.

The alert symbol will be displayed:

- 1) If before the dive in any mode, a RESET was performed.
- 2) If a DECO violation occurred during a SCUBA dive.

Display logbook - Scuba dive (OC)	
	<p>Dive mode (SCUBA/OC) Dive duration – Maximum depth</p> <p>Date – no. of dives in memory – time of the dive</p> <p>Temperature or O₂% on screen 2 – average depth</p>
Display logbook - GAUGE dive	
	<p>Dive mode (GAUGE) Dive duration – Maximum depth</p> <p>Date – no. of dives in memory – time of the dive</p> <p>Temperature – average depth</p>
Display logbook - FREE dive	
	<p>Dive mode (FREE) Dive duration – Maximum depth</p> <p>Date – no. of dives in memory – time of the dive</p> <p>Temperature – average depth</p>

Connect your Tablet computer to your PC or Mac

The TABLET can be connected to your PC or Mac using your SeacSync program (available on www.seacsub.com) to download your dives two ways: using Bluetooth or with a cable to the USB port (optional).

Set the Tablet menu to the PC screen and confirm by pressing the left button. Launch the SeacSync program on your PC or Mac, and from the menu select whether to connect via Bluetooth or USB. For Bluetooth, follow the instructions provided in the SeacSync program window. The Tablet display will switch from Bluetooth discovery to pairing and then to connection. For USB, first connect the Tablet to your PC or Mac with the optional cable (purchased separately), and follow the instructions provided. The Tablet display will show USB on.

<p>The image shows a tablet screen with a blue background. At the top left, it says 'PC' in white. To its right, '0:0:0' is displayed in large pink digits. Below this, a white bar contains the text 'USB ON' and 'BLE ADV' in black. At the bottom, '0:0:0' is displayed in large pink digits. Two small blue diamond-shaped buttons are at the very bottom.</p>	<p>USB ready Visible as Bluetooth device</p>
<p>The image shows a tablet screen with a blue background. At the top left, it says 'PC' in white. To its right, '0:0:0' is displayed in large pink digits. Below this, a white bar contains the text 'USB ON' and 'BLE 777563' in black. At the bottom, '0:0:0' is displayed in large pink digits. Two small blue diamond-shaped buttons are at the very bottom.</p>	<p>USB ready Bluetooth in pairing mode. The Passkey is 6 digits.</p>
<p>The image shows a tablet screen with a blue background. At the top left, it says 'PC' in white. To its right, '0:0:0' is displayed in large pink digits. Below this, a white bar contains the text 'USB ON' and 'BLE CON' in black. At the bottom, '0:0:0' is displayed in large pink digits. Two small blue diamond-shaped buttons are at the very bottom.</p>	<p>USB ready Bluetooth connected</p>

REPLACING THE BATTERY

• WARNING!

Batteries should always be replaced by an authorized SEAC Center, because this is a delicate operation with a high probability of subsequent flooding of the Tablet if performed by inexperienced personnel.

SEAC declines all responsibility for problems resulting from changing the battery.

• WARNING!

When replacing the CR2450 battery, it's a good idea to also replace the O-ring of the battery cap an original SEAC O-ring.

- a) Fully unscrew and remove the two screws from the battery compartment using a PH 00 model Phillips head screwdriver.
- b) Insert a small flathead screwdriver into the special opening located on the bottom of the cap to lift the lid.
- c) If needed, use a small flathead screwdriver to prize up the battery from its housing and remove it.
- d) Insert the new battery, snapping it into its housing and making sure that the "+" polarity sign is facing outward.
- e) Remove the old O-ring from the housing in the metal cover and replace it with the new one. Make sure that the O-Ring is not damaged, and once inserted in the cover make sure it isn't twisted at any point.
- f) Position the cover on the Tablet case, and press it evenly downward. Make sure that in the area around the screws, the cover is flush with the case.
- g) Keep the cover pressed down on the Tablet case while replacing the two screws. Although the two screws are screwed through metal inserts fixed in the case, we recommend not tightening with excessive force to reduce the risk of stripping. The recommended torque is 12 Ncm. The O-ring seal on the battery compartment is radial, so excessive closing force on the compartment screws is not necessary.

NOTE

Do not dispose of used batteries in the environment or discard them as ordinary waste; we recommend using special battery disposal services.

TABLET SERIAL NUMBER

The Tablet serial number is engraved on the back of the case and can also be viewed on the display in the "INFO" function along with the version of the firmware installed.

EC CERTIFICATION

The Tablet is compliant with EC Directives.

If coupled with the LED TANK PROBE functioning as a pressure gauge, it is considered a Category III device as defined under European Regulation 2016/425, and complies with the specifications set out in the harmonized European Standard EN 250/2014 for use with air. It is also compliant with the specifications established by the harmonized European standard EN 13949:2003 for use with oxygen-rich mixtures (Nitrox/O₂). The pressure gauge described in these instructions has undergone the EC certification procedure for a maximum depth of 50 m by Notified Body n.0474 - RINA, via Corsica 12, 16128, Genoa.

CARE AND MAINTENANCE

- Keep your computer clean and dry. Do not expose the computer to chemical agents, including alcohol. Use only fresh water to clean your computer, removing all saline deposits. Leave the computer to dry naturally; do not use jets of hot or cold air. A jet of pressurized air hitting the pressure sensor could damage it irreparably.
- Do not expose the computer to direct sunlight or sources of heat higher than 50°C. Store the computer in a cool (5°C-25°C) and dry place.
- Do not place the computer in a hyperbaric chamber.

The computer is designed for a reading accuracy of +/- 2%. The degree of accuracy required by the European standards is +/- 3.5%.

European standards require that the unit be checked periodically to monitor the precision of its depth and time readings.

- The warranty will be forfeited if the computer is opened by an unauthorized service center.
- The computer is manufactured to withstand use in seawater, but after the dive you must rinse it thoroughly in fresh water and not expose it to direct sunlight or sources of heat to dry it.
- Check that there are no signs of humidity inside the display.

- Do not attempt to open, modify, or repair the computer yourself. Always contact an Authorized Center or SEAC directly.
- **WARNING!**
If you observe any humidity inside the mineral glass, the Tablet must be taken to an authorized SEAC center immediately.
- **WARNING!**
The mineral glass is subject to possible scratches resulting from improper use.
- **WARNING!**
Do not use jets of compressed air to dry or clean the Tablet. This could damage the pressure sensor.
- **WARNING!**
Do NOT use solvents to clean the product. Use only running water.

MARKING

The markings on the device are as follows:

- Name of the product and its manufacturer
- Serial number
- EC: compliance with European Regulations
- FCC ID

CERTIFICATE OF GUARANTEE

The warranty has a duration of two (2) years for the non-professional end user in accordance with current European regulations.

To exercise the warranty, you must display a copy of your proof of purchase upon request.

SEAC guarantees the correct operation of this product as described in this document.

The warranty herein can be exercised according to the conditions and limits expressly indicated below:

1. The warranty has a duration of two (2) years starting from the time the product is purchased at a SEAC authorized dealer and requires no prior or subsequent formal validation.
2. The warranty is acknowledged only to the original buyer of the product at a SEAC authorized dealer. The warranty is strictly individual; it is not

transferable to third parties unless previously and explicitly authorized by SEAC.

3. The warranty covers all damage to the device caused by malfunctions arising from factory defects. Each device is tested in a hyperbaric chamber before it is made available for purchase.

The warranty covers operating defects deriving from:

- Intrinsic defects caused by the use of materials considered unsuitable.
 - Clear errors in the design, manufacturing, or assembling of the product or its components.
 - Incorrect or inadequate instructions and recommendations for use.
4. Any repairs, modifications, transformations, adjustments or tampering in general carried out on the finished product or parts of it that are not authorized in advance by SEAC or that are carried out by non-authorized personnel automatically and immediately void the warranty.
 5. The warranty entitles you to assistance and free repair in the shortest possible time, or to a full free replacement of the product (at the sole discretion of SEAC) or parts of it whenever a malfunctioning defect specifically described in item 3 above is acknowledged by SEAC.
 6. This warranty may also be exercised by shipping the product believed to be defective to SEAC. The authorized intermediary for this operation must be the SEAC dealer where the product was purchased. If this is not practically possible, solely upon authorization from SEAC, customers may be authorized to send the defective product to any other SEAC dealer or directly to SEAC itself.

In order to exercise the warranty, the product must be accompanied by proof of purchase in the form of a copy of the receipt or invoice (or other equivalent fiscal record showing the name of the authorized SEAC dealer from which the product was purchased as well as the date of purchase).

Whenever SEAC receives a product which:

- is not accompanied by proof of purchase having the above mentioned characteristics;
- is in such condition as to determine the termination of the warranty in accordance with the provisions of item 4 above;
- has defects resulting from external and additional causes as compared to the ones specifically mentioned at item 3 above;
- has been used improperly and/or for uses other than those for which the product was designed;

- has clearly been damaged or deteriorated through intensive use or normal wear.

SEAC will not carry out any investigations on the product, and will advise the sender/authorized dealer.

If the sender still wishes an inspection to be performed, a request to that effect must expressly state that he/she is willing to bear all the costs relevant to said inspection (labor, spare parts if any, and shipping charges).

Failing this, SEAC will return the product at the expense and care of the recipient.

The warranty always excludes defects or imperfections deriving from:

- Damage caused by water seepage resulting from improper use; for example, dirty, damaged, or badly mounted seals resulting from changing the battery, incorrect closure of the battery compartment, etc.
- Rupture or scratching of the case, glass, or strap as a result of strong impacts.
- Damage resulting from excessive exposure to elevated or low temperatures.
- Damage caused by the use of compressed air to dry and/or clean the dive computer.
- Improper use or excessive stress.
- Failure to follow the usage instructions.
- External agents, such as damage due to transport, blows or falls, atmospheric agents, natural phenomena, or chemical agents.
- Unauthorized personnel performing maintenance or repairs or opening the device.
- Pressure testing out of the water.
- Accidents while diving.
- Use other than that intended for the product, or other than that indicated in the instruction manual. The warranty does not cover depletion of batteries.

Repairs or replacements made during the warranty period do not imply any right to an extension of the warranty itself.

CE STATEMENT

Model: Tablet Diving Computer

Bluetooth (Transmit and receive):

Frequency range: 2 402-2480MHz

RF output power: 6 dBm max.

Manufacturer:

Latitude Limited

7/F, Southeast Industrial Building, 611-619 Castle Peak Road, Tsuen Wan, N.T.,
Hong Kong

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.
- Battery: CR2450
- Nominal voltage: 3V



Note:

- "Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate."
- "Even used batteries may cause severe injury or death."
- "Call a local poison control center for treatment information."
- Identification of compatible battery type
- Nominal battery voltage
- "Non-rechargeable batteries are not to be recharged."
- "Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns."
- "Ensure the batteries are installed correctly according to polarity (+ and -)."
- "Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries."
- "Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations."
- "Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children."

seac

sea is calling



Headquarter: **SEACSUB S.p.a.**
Via D. Norero, 29 - San Colombano Certenoli (GE)
16040 - Italy
Phone +39 0185 356301 - Fax +39 0185 356300
www.seacsub.com - seacsub@seacsub.com

U.S.A. Branch: **SEAC USA Corp.**
7855 NW 12th Street, Suite 211 - Miami, FL 33126 - USA
Phone +1 786 580 3695
seac.usa@seacusa.com